

Identifying an RF Model's Transmitter 'Channel'

There may be times that RF transmitters may have the same 'channel'. This is something that has been factory programmed by the remote's manufacturer.

Remove (1) battery from the transmitter. It does not make a difference which battery it is; any of the (3) will work.



Figure 1

While the (1) battery is still out, depress the (2) buttons simultaneously as indicated in figure 2. You will want to continue to depress these buttons as you re-install the battery and the battery cover. You can now release the buttons.



Figure 2

The transmitter screen will display a series of letters/numbers. Depress the 0 button 3 times until the screen displays the channel. The channel will vary by transmitter. The channel shown in Figure 3 is 00E4. You will need to check the channel on any additional transmitters. If the channels are identical on any other transmitters, all but one must be replaced. Replacement transmitters can be obtained from your dealer.

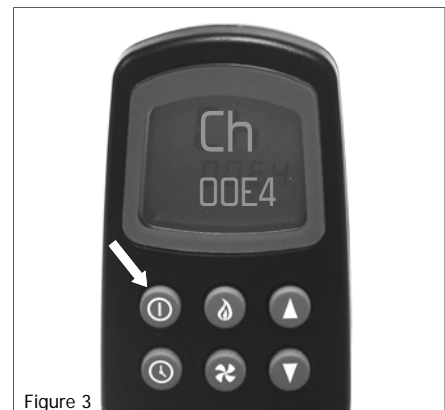


Figure 3

DEALERS: Please inform Kozy Heat of the channel numbers of all transmitters so that you may receive a different channel. The replaced transmitter **must be returned** to Kozy Heat for credit via an RGA number.